

DMX Values

10Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ∘ 255	0–100%
2	Red	000 ∘ 255	0–100%
3	Green	000 ∘ 255	0–100%
4	Blue	000 ∘ 255	0–100%
5	Amber	000 ∘ 255	0–100%
6	Strobe	000 ∘ 010 011 ∘ 255	No function Slow to fast
7	Color Macro + White Balance	000 ∘ 010 No function 011 ∘ 030 R: 100% G: 0–100% B: 0 031 ∘ 050 R: 100%–0 G: 100% B: 0 051 ∘ 070 R: 0 G: 100% B: 0–100% 071 ∘ 090 R: 0 G: 100%–0 B: 100% 091 ∘ 110 R: 0–100% G: 0 B: 100% 111 ∘ 130 R: 100% G: 0 B: 100%–0 131 ∘ 150 R: 100% G: 0–100% B: 0–100% 151 ∘ 170 R: 100%–0 G: 100%–0 B: 100% 171 ∘ 200 R: 100% G: 100% B: 100% A: 100% 201 ∘ 205 White 1 206 ∘ 210 White 2 211 ∘ 215 White 3 216 ∘ 220 White 4 221 ∘ 225 White 5 226 ∘ 230 White 6 231 ∘ 235 White 7 236 ∘ 240 White 8 241 ∘ 245 White 9 246 ∘ 250 White 10 251 ∘ 255 White 11	
8	Auto Programs	000 ∘ 051 No function 052 ∘ 101 Auto 1 102 ∘ 152 Auto 2 153 ∘ 203 Auto 3 204 ∘ 254 Auto 4 255 Auto 5	
9	Auto Speed	000 ∘ 255	Slow to fast
10	Dimmer Speed	000 ∘ 051 Preset dimmer speed from display menu 052 ∘ 101 Linear dimmer 102 ∘ 152 Nonlinear dimming curve 1 (fastest) 153 ∘ 203 Nonlinear dimming curve 2 204 ∘ 255 Nonlinear dimming curve 3 (slowest)	

DMX Values (Cont.)

6 Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ó 255	0–100%
	2	Red	000 ó 255	0–100%
	3	Green	000 ó 255	0–100%
	4	Blue	000 ó 255	0–100%
	5	Amber	000 ó 255	0–100%
	6	Strobe	000 ó 010 011 ó 255	No function Slow to fast

4 Ch	Channel	Function	Value	Percent/Setting
	1	Red	000 ó 255	0–100%
	2	Green	000 ó 255	0–100%
	3	Blue	000 ó 255	0–100%
	4	Amber	000 ó 255	0–100%

HSV	Channel	Function	Value	Percent/Setting
	1	Hue	000 ó 255	0–100%
	2	Saturation	000 ó 255	0–100%
	3	Value	000 ó 255	0–100%

HSI	Channel	Function	Value	Percent/Setting
	1	Hue	000 ó 255	0–100%
	2	Saturation	000 ó 255	0–100%